


Installation Overview

Refer To User Manual For Detailed Instructions

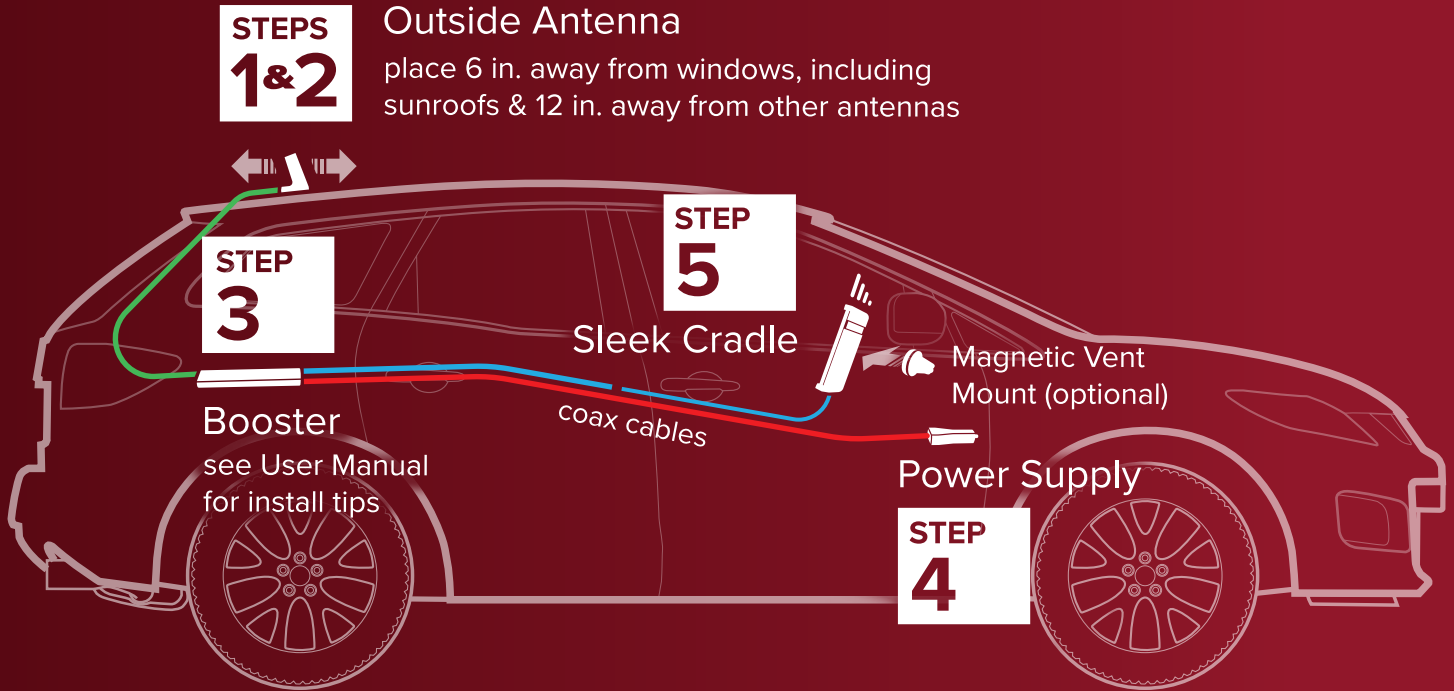

STEPS 1&2

Mount Antenna.

Route & connect cable to 'L ANTENNA' booster port.

STEP 3

Place booster in back of vehicle & route cable to front.

STEP 4

Connect to 12V CLA port & connect to booster (12V only).

STEP 5

Insert phone into cradle, connect cradle to cable from booster & ENJOY!