

POYNTING

BEYOND A CONNECTED LIFE

LYNX SERIES



User Guide

Revision 1.0

Index

1.	Packing Check List	2
2.	Introduction	5
3.	Antenna Alignment	9
4.	Antenna Mounting Precautions	10
5.	Cable Routing	10
6.	Safety	11

Stay Updated: Access the Latest Installation Resources

The information in this manual is intended to provide general guidelines for installing your POYNTING antenna. For the most up-to-date and comprehensive mounting and installation instructions, as well as the latest product information, please visit our website: <https://poynting.tech/>

We recommend checking the website periodically for any updates or revisions to ensure you have the most current information for optimal product performance.


Packing Check List

Item	Description	Quantity
1.	Antenna Unit Only	1
2.	Pipe Clamp	1
3.	Suction Cups with Screw	4
4.	M6 Nuts	4
5.	Wall Knock-in Screws	4
6.	SMA Grip Extenders**	2

***Quantity will differ with different versions*

Appearance of Components


Antenna Unit



Pipe Clamp



Suction Cups with screws

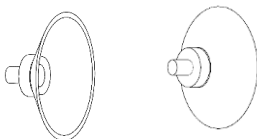

M6 Nut



Wall Knock-in Screws



SMA Grip Extender



Tools Required

6mm Masonry Drill Bit



Impact Drilling Machine



Screwdriver – Cross Slot/Philips



Hammer



Safety Goggles





2. Introduction

This User Guide provides information on the installation instructions of the Omni-directional antenna (A-XPOL-0001).

Antenna Configuration 1

Wall mounting with supplied wall knock-in screws


- Select a suitable place for mounting the antenna.
- Use a 6mm masonry drill bit to drill four holes into the wall. See the dimensions below.
- Place the bracket over the four holes and line up the bracket holes with the holes drilled into the wall. Insert the four knock-in screws through the bracket holes, and tighten using a screwdriver, to mount the bracket to the wall.

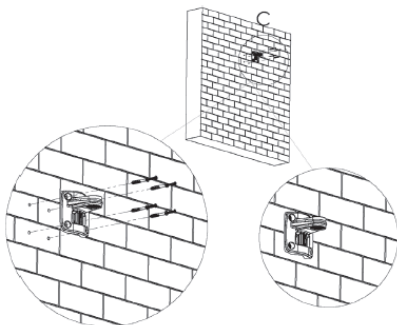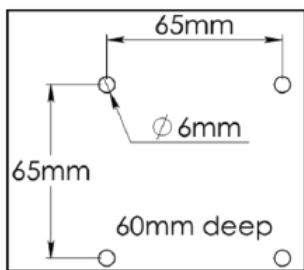

Antenna Configuration 2

Window mounting with supplied suction cups

- Select a suitable mounting place for mounting the antenna.
- Clean the selected area to remove the dirt.
- Insert the four M6 nuts from the front of the antenna bracket.
- Fasten each of the four suction cups through the bracket holes from the back of the bracket.
- Carefully press the antenna suction cups against a window, taking caution not to damage or break the window.



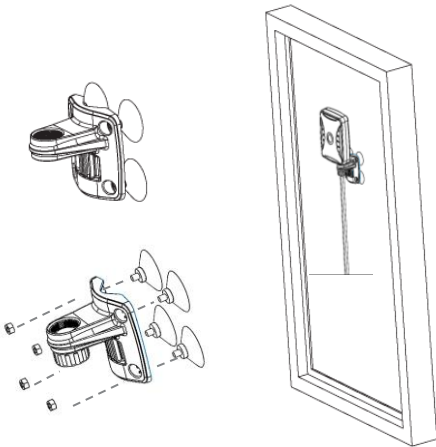


Antenna Configuration 3

Pole mounting with supplied pipe clamp


- Lay the antenna out at the installation site and assemble the antenna on the ground.
- Place the pipe clamp through the bracket as shown below.
- Locate the pole and align the top of the bracket to the top of the pole. Ensure the pole does not extend beyond the bracket.

- Next place the cable clamp around the pole and tighten the screw on the cable clamp until the bracket is secured to the pole.
- Mount the antenna so that there is at least 1 meter of clearance in all directions around it and unobstructed line of sight to the cell tower's strongest signal.

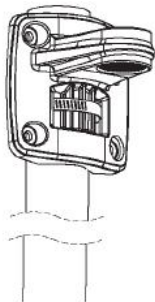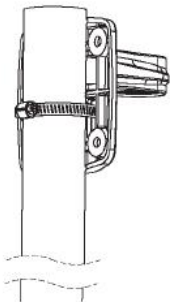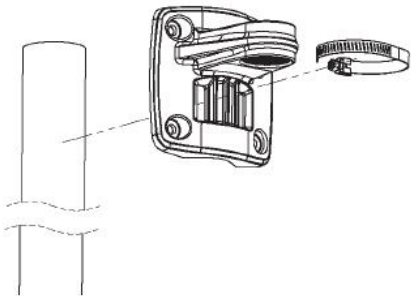


3. Antenna Alignment

- Use appropriate equipment (signal meter or App) to locate the nearest cellular tower in your location as well as the greatest signal strength for the antenna to draw upon.
- Once you have located the tower, point the main center beam of your antenna in the general direction of the cell tower.

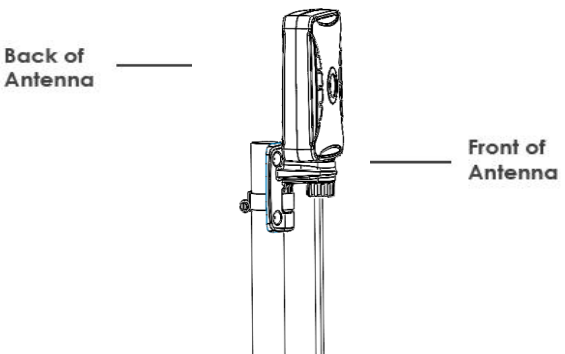

- **Note: Recommended beam width is 70°**

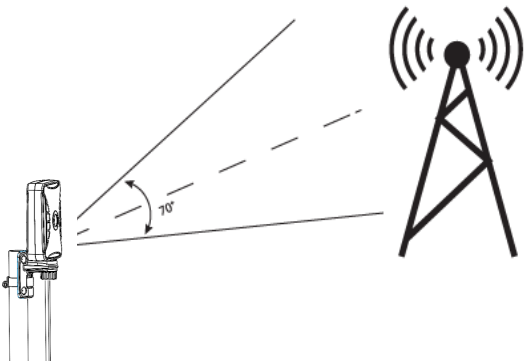

- To optimize the antenna alignment, rotate the antenna left and right in 15° increments until you get the best signal strength reading.

Lock the antenna down at the position where you get the best signal strength.

Note: When rotating the antenna, be sure to let go of the antenna as this may give inaccurate readings.


4. Antenna Mounting Precautions

- Place the antenna at the highest point possible and ensure that there aren't any surrounding obstructions to the antenna.
- Ensure the pole does not extend beyond the top of the bracket to prevent interference.
- In order to avoid communication interference, ensure that the antenna is placed at least 0.5m away from other antennas and metal objects.
- Avoid installing the antenna near a chimney, as the smoke and soot emitted by the chimney can obstruct the signal level achieved by the antenna.
- Install the antenna away from heat sources and flammable gases.

5. Cable Routing

- If the antenna is mounted on a pole, avoid wrapping the cables around the pole. Route the antenna cables straight down the inside of the pole to avoid using extra equipment such as cable ties.
- Use the minimum cable length required. Do not run more cable than needed to ensure minimum cable losses are achieved.

- Never pull on the cable connectors; pull only on the cable ensuring the cable is not under tension.
- The allowable cable bend radius is 30mm.
- Cover connectors with insulation tape before threading them through a hole.

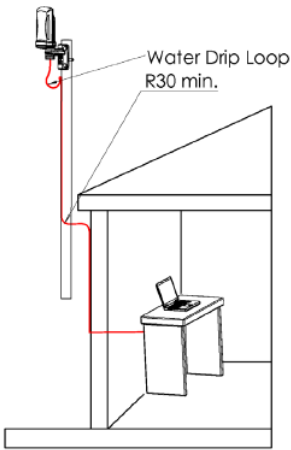

Note: The water drip loop is for preventing water from running down from the antenna along the cable into the house and possibly the PC or router.

6. Safety

- If you are installing an antenna for the first time or unsure about how to install your antenna, obtain the help of a professional installer.
- Carefully survey the installation site before installation to locate secure handholds, dangerous conditions (such as powerlines and weak roofs) and the safest and most convenient placement for ladders if necessary.
- When installing your antenna, remember:

1. Do not install near power lines as they can electrocute you.
2. Do not install on a wet or windy day or when lightning or thunder is in the area.
3. Wear shoes with rubber soles and heels and protective clothing (long sleeve shirt or jacket) and rubber gloves.
4. Avoid operating while under the influence of drugs, alcohol, or medication.
5. Make sure that any loose-fitting jewelry or clothing is secured and tie back long hair as they can get caught in moving parts during installation.
6. If the antenna assembly starts to fall, get away from it and let it fall to avoid harm to yourself.

When drilling, remember

1. Use safety goggles when drilling the holes.
2. Avoid using bits that are dull, bent or damaged.
3. Be aware of where your fingers are in relation to the drill bit when using the drilling machine.
4. To stop the drilling machine, let the drill chuck come to a complete stop on its own. Do not grasp the chuck in an attempt to stop the drill bit.
5. Avoid awkward hand positions where a sudden slip could cause a hand to move into the drill bit or cutting tool.

South Africa

Unit 4, N1 Industrial Park
Landmarks Ave
Samrand, 0157
South Africa
Tel: +27 12 657 0050
info@poynting.tech

USA

1804 Owen Court,
Suite 104, Mansfield,
TX 76063
Tel: +1 817 533-8130
sales-us@poynting.tech

Europe

Kronstadler Straße 4,
81677 München
Germany
Tel: +49 89 2080 265 38
Mob.: +49 176 529 733 50
sales-europe@poynting.tech

CAUTION:

Antennas must be installed to provide a separation distance of at least 20cm from all persons so as to comply with SAR (Specific Absorption Rate) RF Exposure requirements.



European Waste Electronic Equipment
Directive 2002/96/EC

Please ensure that old waste electricals
and electronics are recycled.



Directive 2011/65/EU (RoHS 3)

This product is fully compliant with the
RoHS 3 directive.